



PURPOSE

To safely set tubing bridge plugs or other devices without the use of electric line.

ASSEMBLY PARTS

- 1. Fishneck
- 2. Safety Sleeve
- 3. Upper Rod
- 4. Shear Sub
- 5. Cylinder
- 6. Lower Rod
- 7. Firing Pin Housing
- 8. Shear Pin Cover
- 9. Firing Pin

OPERATION

Attach to desired crossover and corresponding running tool to the Safety Firing Head. Ensure Safety collar is in locked position and attach to tool string, release safety sleeve and lower into wellbore.

Once desired depth has been achieved, jar down on preset tubing stop, or obstruction to shear top pin and begin the firing sequence.

Set entire tool string weight on the firing head to actuate the internal piston, once the piston has traveled to the extent of it's range, jar down once again to shear the firing pin and fire the running tool below. Remove equipment from wellbore.

*In the event of a misfire the Safety Firing head will open to remove any contact with misfired charges. Use extreme caution when handling if a misfire occurs.

Nominal Size		1.75"
Assembly Number		0201FH175A0
Item	Part Name	
1	Fishneck	0201FH17501
2	Safety Sleeve	0201FH17502
3	Upper Rod	0201FH17503
4	Shear Sub	0201FH17504
5	Cylinder	0201FH17505
6	Lower Rod	0201FH17506
7	Firing Pin Housing	0201FH17507
8	Shear Pin Cover	0201FH17508
9	Firing Pin	0201FHC17509
Top Thread Connection		0.938" - 10 UN
Max O.D.		1.75"
Fishneck size		1.375"

2. running tools

When ordering please specify part name and size. Call us Toll Free: 1-800-438-0061