



#### PURPOSE

To catch and trap debris that is suspended in wellbore.

#### ASSEMBLY PARTS

1. Fishneck
2. Barrel
3. Flapper Seat
4. Flapper
5. Connector Sub
6. Gauge Ring

#### OPERATION

Assemble the Junk Catcher with the desired size of gauge ring and hoist into the lubricator. Lower into wellbore making note of any fluid level, once in fluid the speed of descent should be rapid enough to hold the flapper in the open position, thus allowing debris to pass through and become trapped in the slotted barrel. Once desired depth has been achieved, remove Junk Catcher from wellbore and inspect contents.

#### PRECAUTIONS

Ensure the proper gauge ring is installed, large diameter material may not be able to pass through opening in Junk Catcher, if this is suspected, other avenues may have to be considered.

Nominal Size		1.75"	2.25"
Assembly Number		0601JCF175A0	0601JCF225A0
Item	Part Name		
1	Fishneck	0601JCF17501	0601JCF22501
2	Barrel	0601JCF17502	0601JCF22502
3	Flapper	0601SBF17503	0601JCF22503
4	Flapper Seat	0601SBF17504	0601JCF22504
5	Connector Sub	0601JCF17505	0601JCF22505
6	Gauge Ring	0010GRR20002	0601JCF22506
Top Thread Connection		0.938" - 10 UN	0.938 - 10 UN
***Max O.D.		1.906"	2.347"
Fishneck size		1.37"	1.37"

\*\*\*Larger gauge rings available upon request.

When ordering please specify part name and size. Call us Toll Free: 1-800-438-0061