



PURPOSE

Designed to intensify the jarring action and cushion the force on the rope socket.

ASSEMBLY PARTS

- 1. Fishneck
- 2. Barrel
- 3. Cap
- 4. Mandrel
- 5. Spring
- 6. End Cap
- 7. Bottom Sub

OPERATION

Run in tool string directly below the rope socket when jarring up. The spring is collapsed and when the hydraulic jars fire, the spring tension is released, accelerating the tool string upwards at a much higher rate of speed.

This keeps the energy of the jarring force in the tool string and lessens the force on the line and rope socket.

PRECAUTIONS

Do not place vice jaws or pipe wrenches on the barrel where it can be crushed. Remove Cap Head Screws before attempting disassembly.

Check for cracks or damaged parts when servicing.

Nominal Size		1.50"	1.75"
Assembly Number		0101A150A0	0101A175A0
Item	Part Name		
1	Fishneck	0101A15001	0101A17501
2	Barrel	0101A15002	0101A17502
3	Cap	0101A15003	0101A17503
4	Mandrel	0101A15004	0101A17504
5	Spring	0101A15005	0101A17505
6	End Cap	0101A15006	0101A17506
7	Bottom Sub	0101A15007	0101A17507
Upper Thread Connection		0.938"-10 UN	1.062"-10 UN
Lower Thread Connection		0.938"-10 UN	1.062"-10 UN
Max O.D.		1.50"	1.75"
Fishneck size		1.37"	1.75"

* Non-Stock Item. Please call for price and delivery.

When ordering please specify part name and size. Call us Toll Free: 1-800-438-0061