

**PURPOSE**

Used as a plug to hold pressure from the bottom only.

ASSEMBLY PARTS

1. Valve
2. Bean Spring
3. Bean
4. Valve Spring
5. Cage

OPERATION

Attach to the bottom of desired lock and lower into wellbore to desired depth. Set lock mandrel and remove toolstring from wellbore, bleed wellbore off to check integrity of plug.

Install proper length probe into the appropriate pulling tool and lower into wellbore, rest toolstring weight on valve to allow pressure to equalize, jar up / down as required to unset lock mandrel and remove from wellbore.

Nominal Size		1.50"	2.00"
Assembly Number		0902C150A0	0902C200A0
Item	Part Name		
1	Valve	0902C15001	0902C15001
2	Bean Spring	0902A15002	0902A20002
3	Bean	0902C15003	0902C20003
4	Valve Spring	0902C15004	0902C15004
5	Cage	0902C15005	0902C20005
Upper Thread Connection		0.875"-14 UN	1.18"-14 UN
Max O.D.		1.125"	1.50"

Nominal Size		2.50"	3.00"
Assembly Number		0902C250A0	0902C300A0
Item	Part Name		
1	Valve	0902C15001	0902C15001
2	Bean Spring	0902A25002	0902A30002
3	Bean	0902C25003	0902C30003
4	Valve Spring	0902C15004	0902C15004
5	Cage	0902C25005	0902C30005
Upper Thread Connection		1.562"-12 UN	2.00"-12 UN
Max O.D.		1.75"	1.875"

* Non-Stock Item. Please call for price and delivery.

9. equalizing assemblies

When ordering please specify part name and size. Call us Toll Free: 1-800-438-0061