



PURPOSE

To spot or deposit acid / cement on or into downhole equipment.

ASSEMBLY PARTS

1. Fishneck (Top Fill Sub)
2. Barrel
3. Shear Disc Sub
4. Shear Disc
5. Sleeve
6. Dart
7. Spring
8. Bottom Sub

OPERATION

Assemble dump bailer with fill sub elevated, fill with desired material through slot in fill sub and hoist into lubricator.

Lower into wellbore to desired depth jar down to puncture shear disc and release material.

Remove from wellbore.

PRECAUTIONS

Ensure all connections are tight so as to prevent leakage. Inspection and maintenance of components will extend the life of the bailer, especially in corrosive environments.

* Non-Stock Item. Please call for price and delivery.

(Sizes on next page)

When ordering please specify part name and size. Call us Toll Free: 1-800-438-0061

Nominal Size		1.37"	1.62"	1.75	2.12"
Assembly Number		0601DB137A0	0601DB162A0	0601DB175A0	0601DB212A0
Item	Part Name				
1	Fishneck	0601DB13701	0601DB16201	0601DB17501	0601DB21201
2	Barrel	0601DB13702	0601DB16202	0601DB17502	0601DB21202
3	Shear Disc Sub	0601DB13704	0601DB16204	0601DB17504	0601DB17504
4	Shear Disc	0601DB13705	0601DB16205	0601DB17505	0601DB17505
5	Sleeve	0601DB13706	0601DB16206	0601DB17506	0601DB17506
6	Dart	0601DB13707	0601DB16207	0601DB17507	0601DB17507
7	Spring	0601DB13708	0601DB16208	0601DB17508	0601DB17508
8	Bottom Sub	0601DB13709	0601DB16209	0601DB17509	0601DB17509
Top Thread Connection		0.938" - 10 UN	0.938" - 10 UN	0.938" - 10 UN	0.938" - 10 UN
Max O.D.		1.37"	1.62"	1.75"	2.12"
Fishneck size		1.187"	1.187"	1.375"	1.375"

* Non-Stock Item. Please call for price and delivery.

When ordering please specify part name and size. Call us Toll Free: 1-800-438-0061